


BUFFALO BAG

HANDCRAFTED LEATHER



Mounting instructions for saddlebags to Sportster bikes

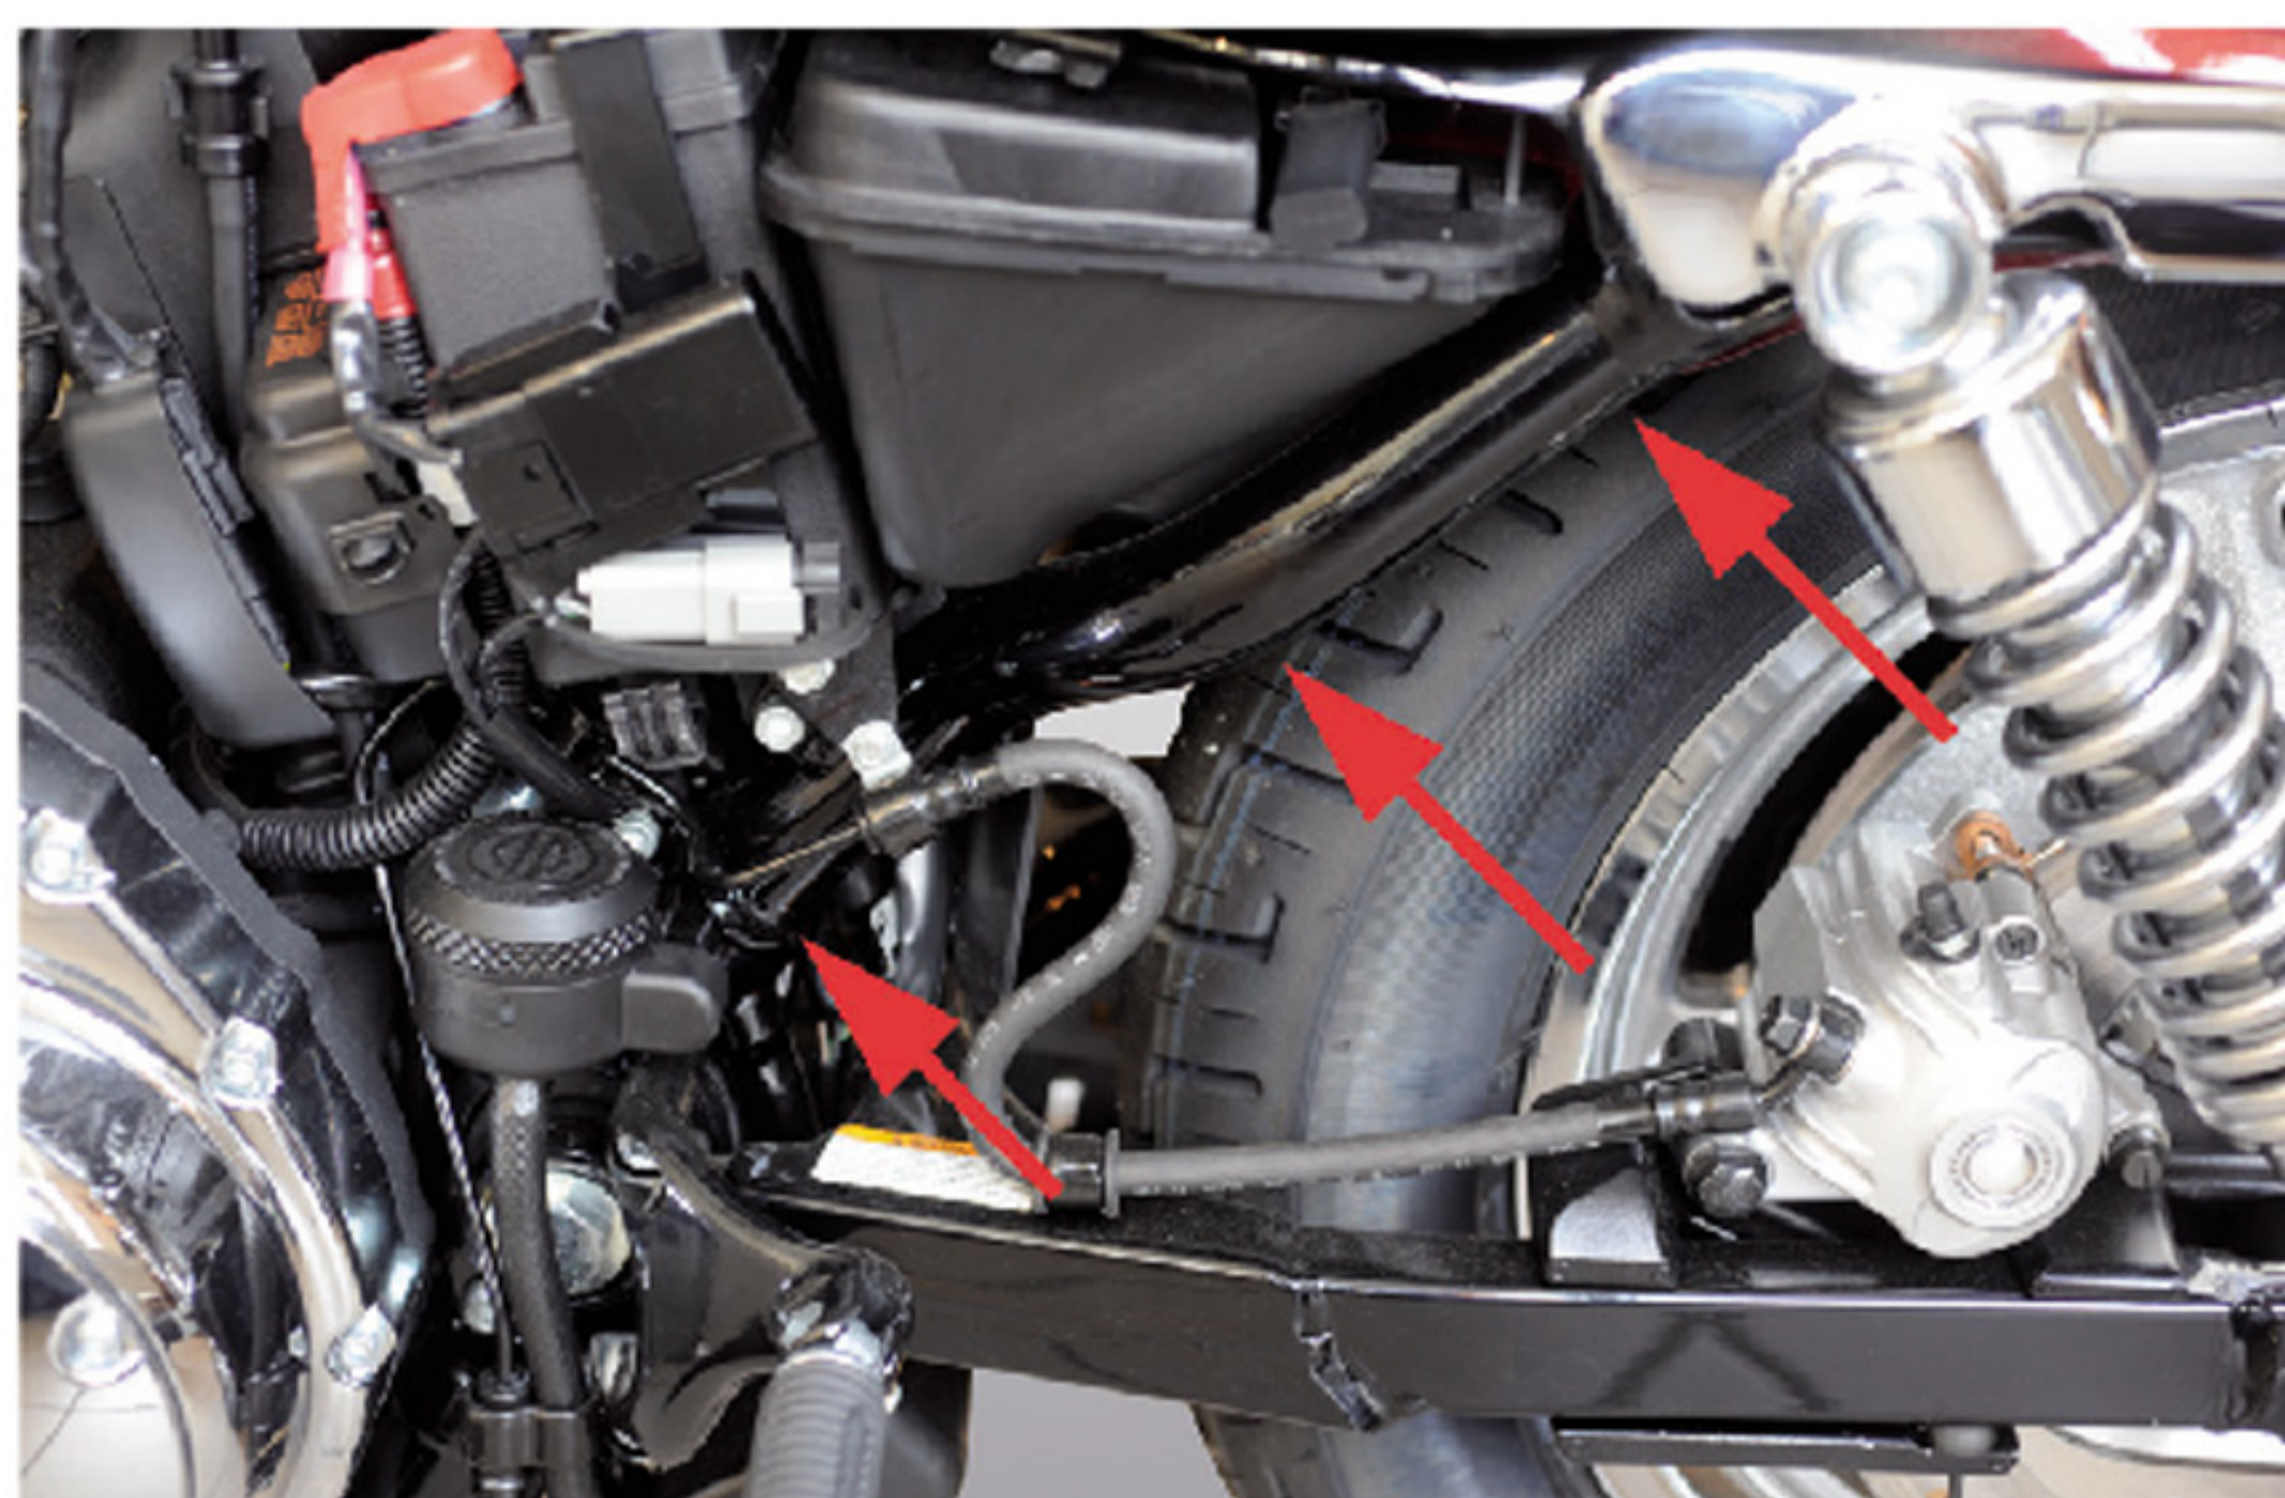

Left:

Our Sportster saddlebags have three retaining straps. Naturally these are mounted to three points of the bike. After you've removed the left battery cover, you'll see the frame tube which is running down from the shock to the engine. Here the two upper straps of the bag are being tightened (check the two right arrows). More difficult is the back frame tube, which is positioned nearly directly at the engine (left arrow). Here the lower strap is going to be mounted. That is our first work step.

Right:



Left:

Here again a detailed picture of the tube which is located far behind the brake tube. This point is easier to reach with older Sportster models.

As soon as you've pulled the strap through, run it back in the belt gaps of the saddlebag and pull it as tight as possible. You can put the overlaying strap end in the inside of the bag or cut it off accurately. Now you can mount the two upper straps - that is far more easier than the procedure before. In the end you should push the buckles in a position, where are not in the way.

Below:

This is how it should look like. Please be aware that , if you've a passenger peg, it cannot be flipped up again and only offers a limited footing. Now all you've to do is to remount the battery cover.

Below:

Well, that looks great! Now you can load the saddlebag ad libitum. Check periodically, if the bag fits firmly. Through wetness the leather straps will give in in the beginning and should be retightened. For an additional secure fitting, 3 cable retainers are included in the delivery.

