




## Mounting instructions saddlebag + bracket HD Sportster

### Scope of supply:

- 1x Saddlebag
- 1x Bracket
- 2x counterparts
- 1x Adhesive strip
- 4x Hexagon screw M6x20
- 4x Self-locking nut M6
- 8x Washer M6

### Step 1:

Fix the adhesive strip to the inside of the bracket. Cut the overlapping parts of using a knife or scissors. The tape protects the bracket and the frame against damages.

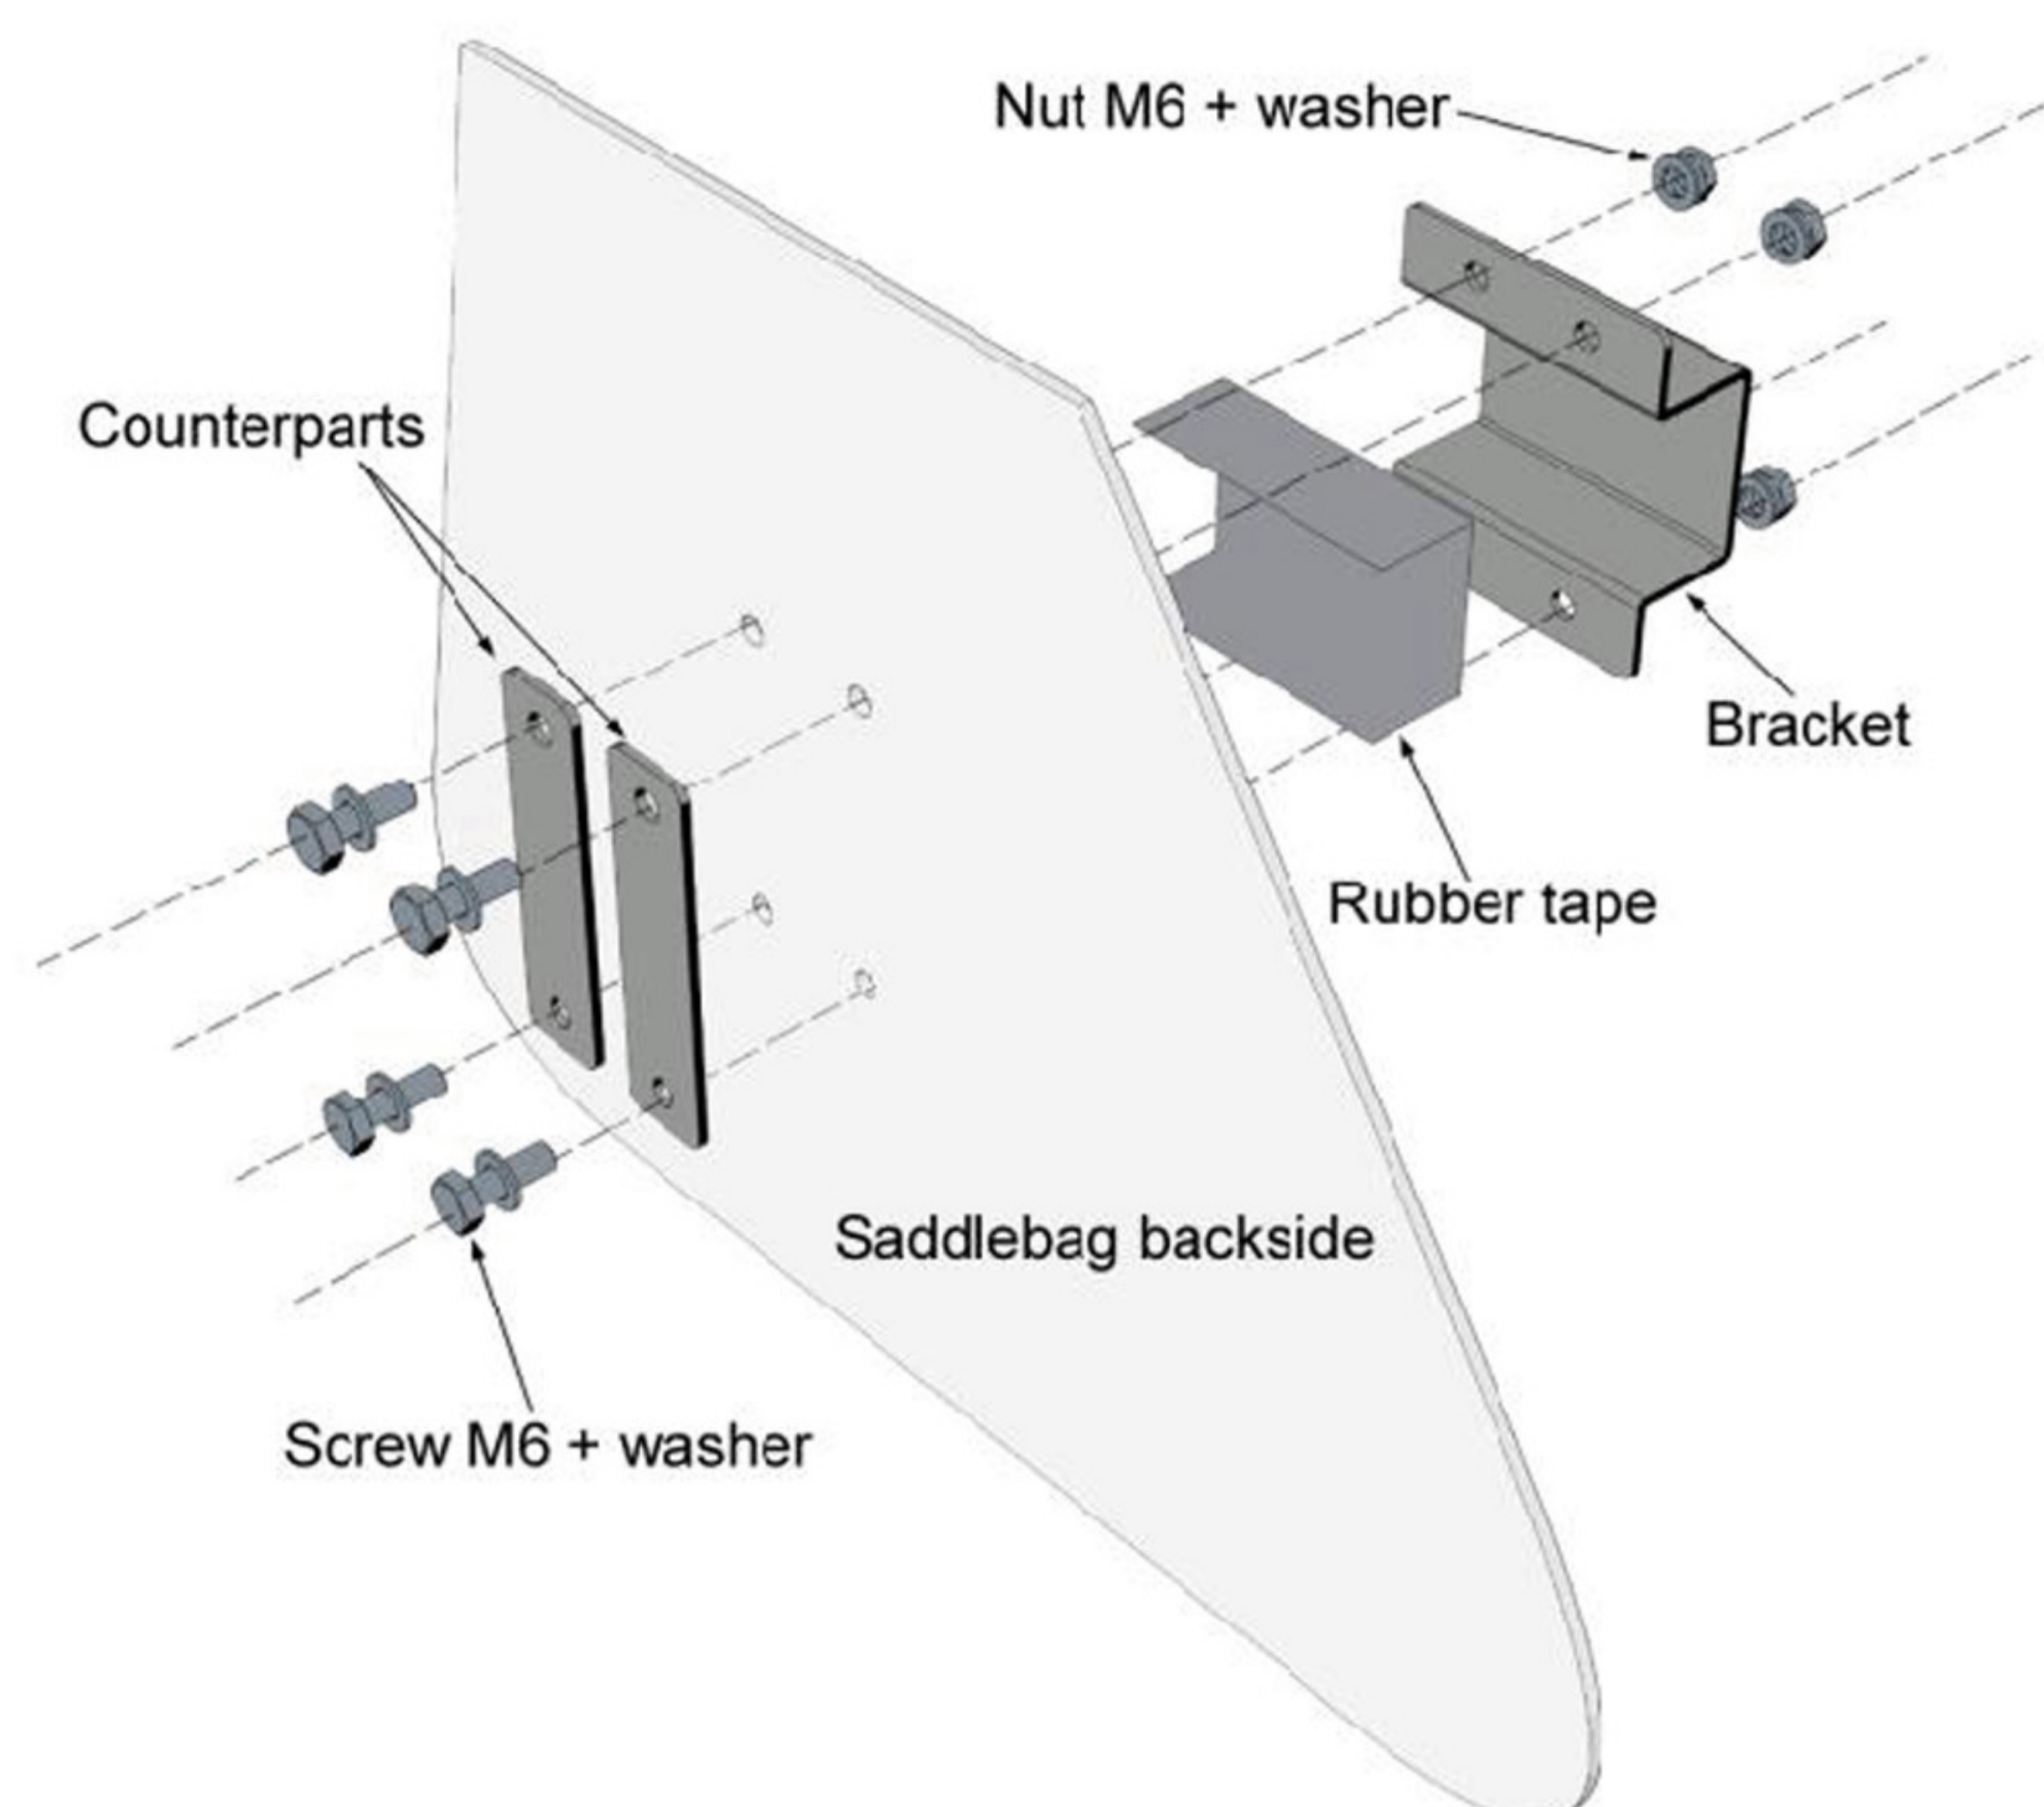

### Step 2 :

Now the bracket can be put from behind to the frame.

### Step 3:

Now determine the correct/desired position of the saddlebag. Please be aware, that the bike is going to deflect when riding it. The shock is compressed and the swing arm immerses. That means the bag has to be mounted in a way, that there's enough space left. Otherwise the side cladding might be damaged or scratched

When you've determine the correct position, mark the drill holes with e.g. a pencil and drill from the backside through the saddlebag. Put the counterparts to the inside of the bag and screw the tot he bracket.

